






INSTALLATION INSTRUCTIONS

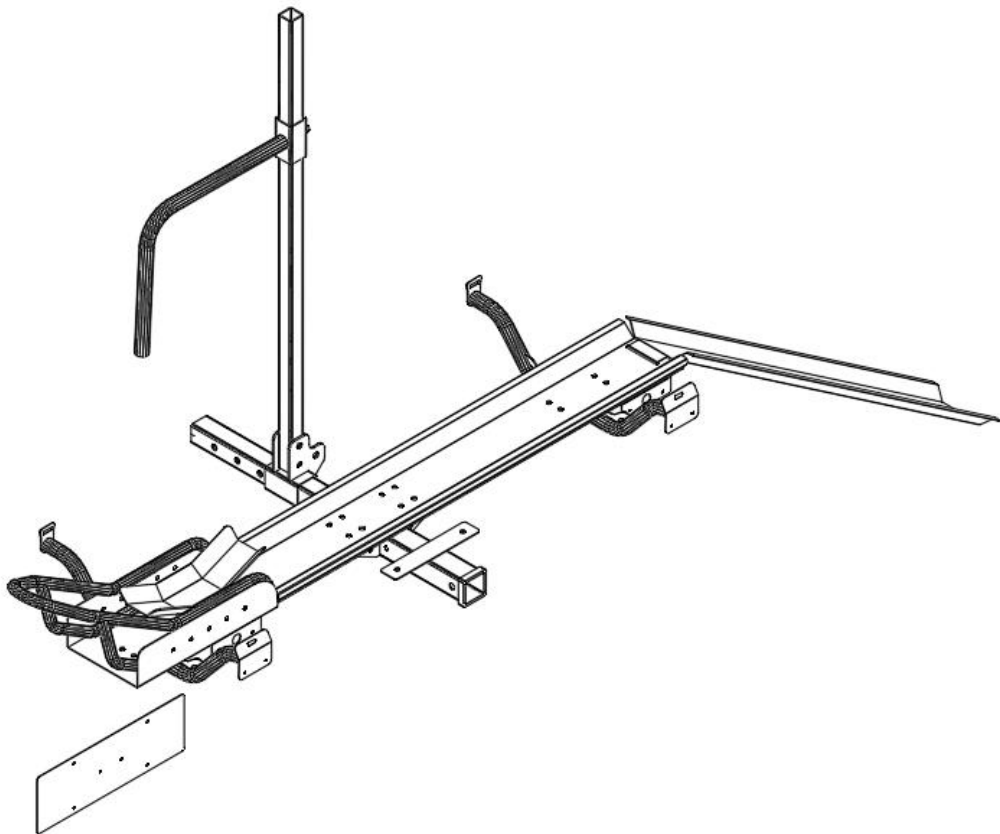



**Read the installation instructions carefully to avoid damaging the
vehicle or the competitive bar !!!**

3.M10X240--1

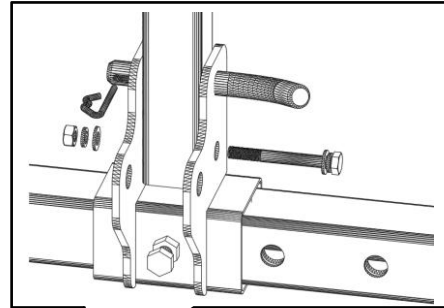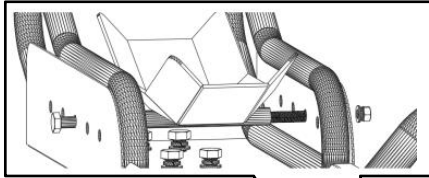


4.M10x70--1

Pin--1

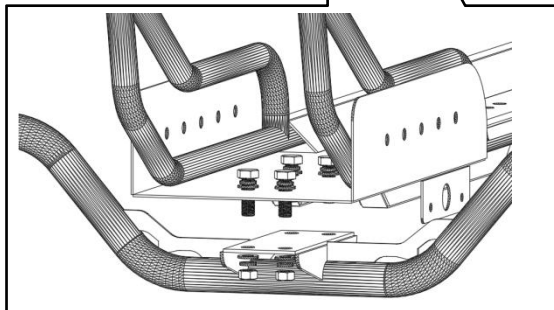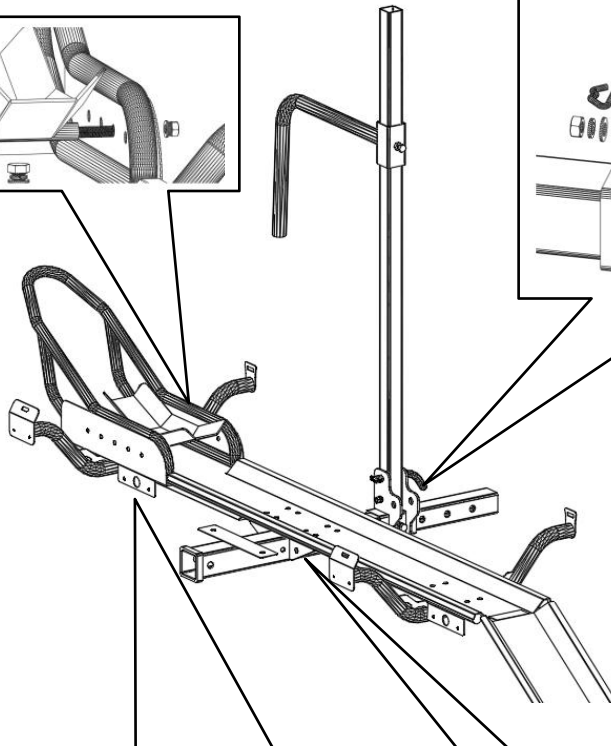

1.M12X35--8

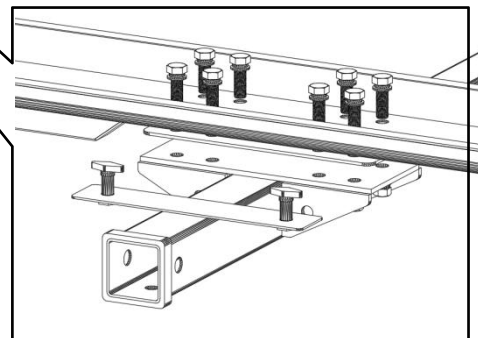

2.M12X35--8

Eye bolt M12--2

MADE IN CHINA

